

IN THE UNITED STATES PATENT AND TRADEMARK OFFICE

Applicant:

Scott P. Gary

Docket:

TI-31759

Serial No.:

09/822,748

Art Unit:

TBD

Filed:

03/30/2001

Examiner:

TBD

For:

Using Remote Procedure Calls to Manager Co-Processor Resources

TRANSMITTAL OF FORMAL DRAWINGS

July 3, 2001

Assistant Commissioner For Patents Attn: Official Drafts Person

Washington, DC 20231

MAILING CERTIFICATE UNDER 37 C.F.R. § 1.8(a)

I hereby certify that the above correspondence is being deposited with the U.S. Postal Service as First Class Mail in an envelope addressed to: Assistant formmissioner For Patents,

Washington, DC 20231.

Flizak a Austin

7/3/200/

Dear Sir:

Submitted herewith are _7_ sheets of formal drawings.

The enclosed drawings are being submitted in a timely manner, therefore, no additional fee is necessary.

Respectfully submitted,

Ronald O. Neerings

Attorney for Applicants

Reg. No.: 34,227


Texas Instruments Incorporated

P. O. Box 655474, MS 3999


Dallas, Texas 75265 (972) 917-5299

Fax: (972) 917-4418

or (972) 917-4417

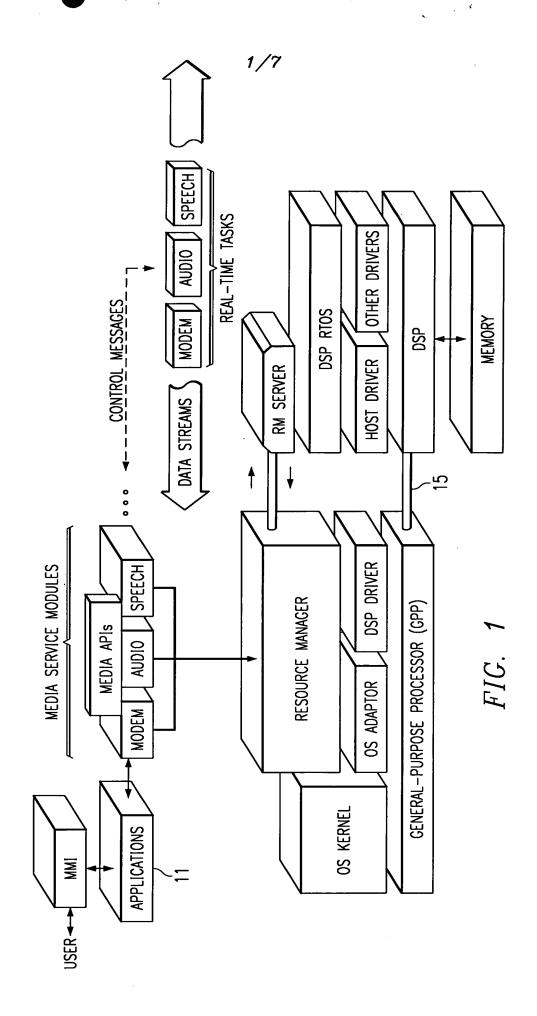



2/7

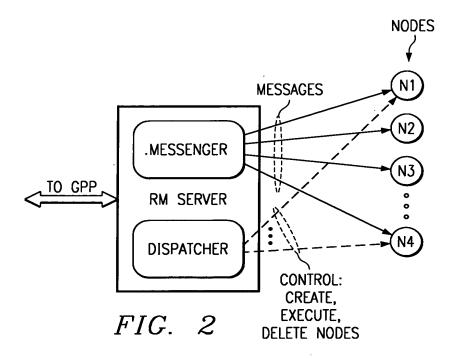


SERVER FUNCTION	PURPOSE	
RMS_queryServer	ALLOW GPP TO QUERY SERVER INFORMATION	
RMS_configureServer	ALLOW GPP TO SET SERVER CONFIGURATION PARAMETERS	
RMS_createNode	CREATE A MESSAGE, TASK, OR xDAIS SOCKET NODE	
RMS_executeNode	LAUNCH A NODE INTO ITS EXECUTE PHASE .	
RMS_deleteNode	DELETE A NODE'S RESOURCES	
RMS_changeNodePriority	CHANGE EXECUTION PRIORITY OF A NODE	
RMS_readMemory	READ A WORD OF DSP MEMORY	
RMS_writeMemory	WRITE A BLOCK OF DSP MEMORY	


FIG. 3

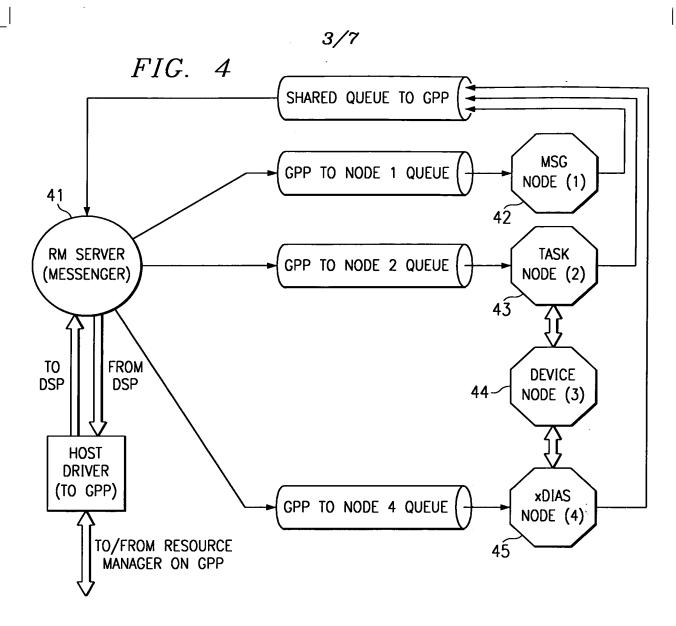


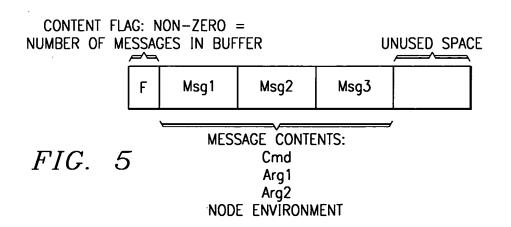

4/7

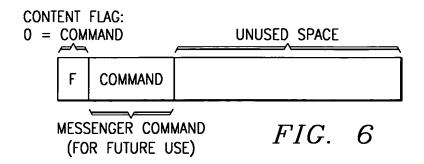

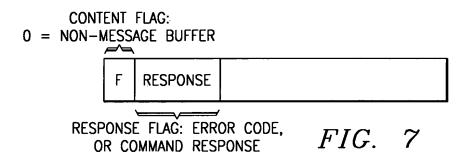

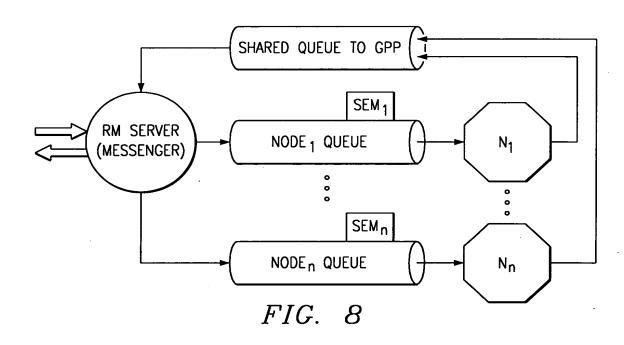


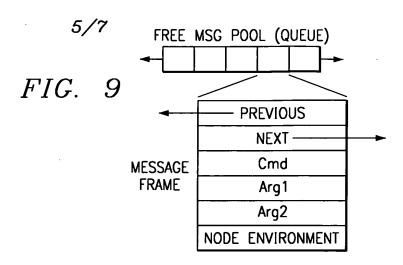


FIG. 10

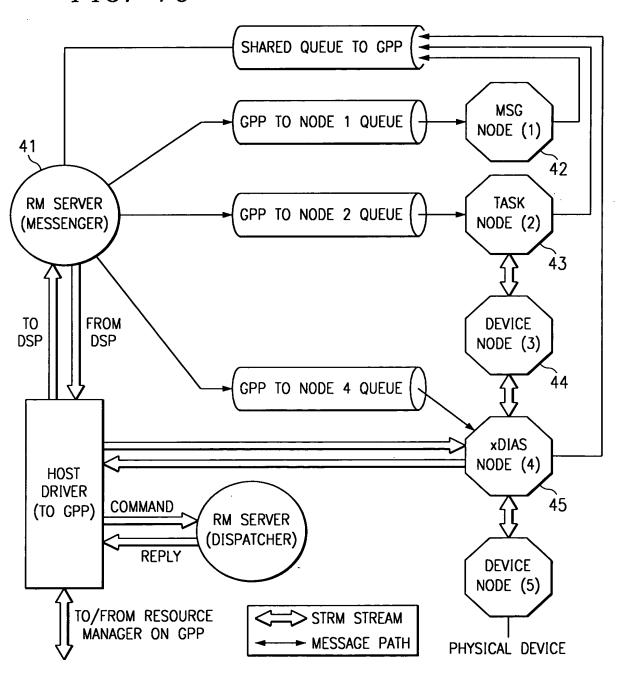

6/7

COMMAND FIELD (32-BITS)	CONTENTS
fxn	ADDRESS OF SERVER FUNCTION TO EXECUTE
arg1	SERVER FUNCTION ARGUMENT 1
org2 SERVER FUNCTION ARGUMENT 2	
data[]	FUNCTION-SPECIFIC DATA ARRAY

FIG. 11

REPLY FIELD (32-BITS)	CONTENTS
RESULT	NODE OR SERVER FUNCTION RETURN CODE
arg1	COMMAND-SPECIFIC RETURN ARGUMENT 1
arg2	COMMAND-SPECIFIC RETURN ARGUMENT 2

FIG. 12

SERVER FUNCTION	RESULT	arg1	arg2
RMS_queryServer	QUERIED VALUE	_	_
RMS_configureServer	SUCCESS/FAIL RETURN CODE	-	_
RMS_createNode	nodeCreate RETURN CODE	NODE ENVIRONMENT PTR	_
RMS_executeNode	nodeExecute RETURN CODE, OR COMMAND ACK	_	_
RMS_deleteNode	nodeDelete RETURN CODE	-	_
RMS_changeNodePriority	SUCCESS/FAIL RETURN CODE	-	-
RMS_readMemory	MEMORY CONTENTS -		_
RMS_writeMemory	SUCCESS/FAIL RETURN CODE	_	_

FIG. 14

7/7	
,	

RETURN CODE	ENUMERATED VALUE	MEANING
RMS_EOK	0	OK, NO ERROR
RMS_EOUTOFMEMORY	1	MEMORY ALLOCATION FAILURE
RMS_EMEMFREE	2	MEMORY DE-ALLOCATION FAILURE
RMS_EOUTOFIO	3	I/O ALLOCATION FAILURE
RMS_EIOFREE	4	I/O DE-ALLOCATION FAILURE
RMS_ERESOURCE	5	A RESOURCE WAS UNAVAILABLE
RMS_ENOTFOUND	6	SYMBOL OR MODULE NOT FOUND

